

NC terminal manual

profile

NC terminal , it is a kind of computer terminal equipment with embedded OS, it can logon on distant server through special software .It can be run as a general PC independly .It is easy to be carried and be managed . It is in small dimension and insider hottness would be emitted easily. It has many other function ,such as distant control, monitor .



(there are several colors of the case for your choose)

function introduce

1. good appearance ,small dimension ,and it can be hold as your wish
2. DC outsied power supply, few power consuming , and more stable(DC 12V) , AC power adaptor ,decrease case hottness emittness.
3. Middle classical NC terminal can be run automatically with power on
4. It can be set timly power off as your will.
5. It can be installed multimedia training software ,and it is the very necessary part of multimedia classroom.
6. It has all kinds of computer interface, it can be connected with most kinds of series-equipments , parallel- equipment, and USB equipments.
7. Flash HDD is with written protected function, and it can be prevent from being infected by virus or any other digital destory , it can be recoveied after rebooting your machine.

8. It can be used to play all kinds of media file, it can be used in many fields, such as advertisement, demo,exhibition ,and monitor.

9. It can be connected to the server throught netline ,and it can operate all the software in server, such as ERP ,or other big size applicant software

operate manual

setup procedures

1 . Install windows 2003 server OS in main server , open control panel ,double kick the option of “SYSTEM” , open system property , choose long-range , kick “allow user to logon to this server distantly ”

2 . Add new user in main server and setup the password .

3. Connecting between the NC termial and server by netline within the same local area network. If different IP address, please choose the option of the net-connection in the main server OS, open property , double kick “internet (protocol) TCP/IP , and set the IP address and netgate to the same address section of the main server (It is the same PC related setting)

4. Boot NC terminal ,and kick the option of “connecting to the server ” , click “option” of dialog box .You can setup the username , password,color, ditingished rate .If you want the local parpael equipment , printer ,U-Disk equipment to connect to the main server ,you should click the option of related equipment (DISK ,print , parpael interface) in local area.

5. After setting , you should input the IP address or the computer name of the main server in the dialog box , you should kick connection of NC terminal .You can see the logon dialog box interface of the server , after inputing username and password, you can logon the server .It is the same procedure of PC.

6. How to use the printer of other NC terminal ? After logoning the server, you should open “ control panel ” , secondly choose the printer setting , thirdly you can choose “add printer” , fourthly you choose “network printer” , fifthly you choose “searching printer” ,sixthly you can find the pinter installed in the NC before , finally you should kick finished.

7. How to the U-Disk in the NC terminal .After logon the main server, you kick the network neighbour, click “search the group computer” .After this ,you can find NC terminal based on the computer name, then you can visit the U-disk in NC terminal.

Operation skill

1. System safe mode : you should open the file direction : c:\ program files , then search the file of “setting system securities” . After double click , the safe mode is done.

If safe mode open ,the OS would be recovered each reboot , the same function as recovery card

2. Setup and cancel the function of “ RUN automatically when power on” .When NC boot ,enter “DEL” of keyboard , enter CMOS setting interface. Choose and enter “ integrated peripherals ” ,then you should search for the option of “PWRON After PWR-Fail” , if you choose “ON ” the function would be on , if you choose “OFF” , the function would be off .

3. Timely off function setting. Open the file direction C:\Program Files , search the file “ timely off” , click your mouse ,choose edit .You can change the off time as you want in the opened txt file ,then saved and quit .After these steps, double click “execute” to run the function.

Because different user has different demand, the related operating and setting would not be the same .If you have more question ,please contact with local dealer .Thanks.